

INSTRUCTION MANUAL

MIDDY'S

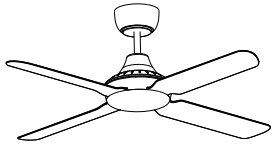

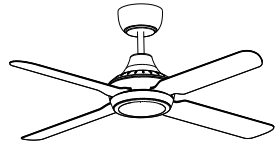

(This photo is for reference only; it does not mean you are purchasing an identical product. Fan picture is for illustration purposes only. Styles may vary according to the model.)

Ceiling Fan Installation Manual, Rev 1.0

HUGO

Model: HUG1204WH HUG1204WH-L
HUG1204WH-LR
HUG1304WH HUG1304WH-L
HUG1304WH-LR

CAUTION

Read Instructions Carefully For Safe Installation and Fan Operation

- INSTALLATION
- OPERATION
- MAINTENANCE
- WARRANTY INFORMATION



MUST BE INSTALLED BY A LICENSED ELECTRICIAN

THANK YOU FOR PURCHASING

Thank you for purchasing this quality MIDDY'S ceiling fan.

Please read all instructions carefully to ensure correct installation, and operation.

Note: Keep this manual for future reference.

SAFETY PRECAUTIONS

1 To Ensure a safe and successful installation, refer to, and follow, all instructions and diagrams.

2 All electrical work should only commence after disconnection of the power. Remove fuses or turn off the circuit breaker to ensure all pole isolation of the electrical supply.

3 Make sure that your installation site will not allow the rotating fan blades to come in contact with any object and that there is a minimum clearance of 300mm from the blade tip to the wall or ceiling. Please note that the greater the clearance around the fan, the better the airflow will be.

4 The fixing point for the fan must be able to support the weight of 4 times that of the net weight of the fan. Net weights can be found on the next page. If you are mounting the fan to a ceiling junction box, the box and fixing must be able to support the moving weight of the fan and must not twist or work loose.

5 The fan must be earthed.

6 It is not recommended that ceiling fans and gas appliances be operated in the same room at the same time.

7 Do not insert anything into the fan blades while the fan is operating. This will damage the blades and upset the balance of the unit causing it to wobble.

8 Once fully installed, double check that all connections are secured and tightened before operating.

9 Because of the fan's natural movement, some connections may loosen over time. Check the support connections, brackets and blade attachments twice a year, adjust/gently tighten as necessary.

10 Always have your fan installed by a licensed electrician.

11 This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.

12 Children should be supervised to ensure that they do not play with the appliance.

13 The fan is to be installed so that the blades are at least 2.1 m or more above the floor.



tropical climate

This product is suitable for use in Tropical climate areas.
The Fan may be used indoors fully / covered outdoors and is ideal for commercial applications.

IMPORTANT:

This fan is suitable for indoor/ fully covered outdoor use only.


An all-pole disconnection switch must be incorporated into the fixed wiring, in accordance with local wiring rules.

SPECIFICATION

MODEL	Light Wattage (W)	Fan Wattage (W)	Voltage (V)	Frequency (Hz)	Net Weight (Kg)
HUG1204WH	No Light	55 watts	220-240V	50Hz	5.87kg
HUG1204WH-L HUG1204WH-LR	20 watts (TRI COLOUR)	55 watts	220-240V	50Hz	6.34kg
HUG1304WH	No Light	68 watts	220-240V	50Hz	6.90kg
HUG1304WH-L HUG1304WH-LR	20 watts (TRI COLOUR)	68 watts	220-240V	50Hz	7.20kg

PARTS LIST

Unpack the fan and carefully identify the parts.Please refer to Fig1.

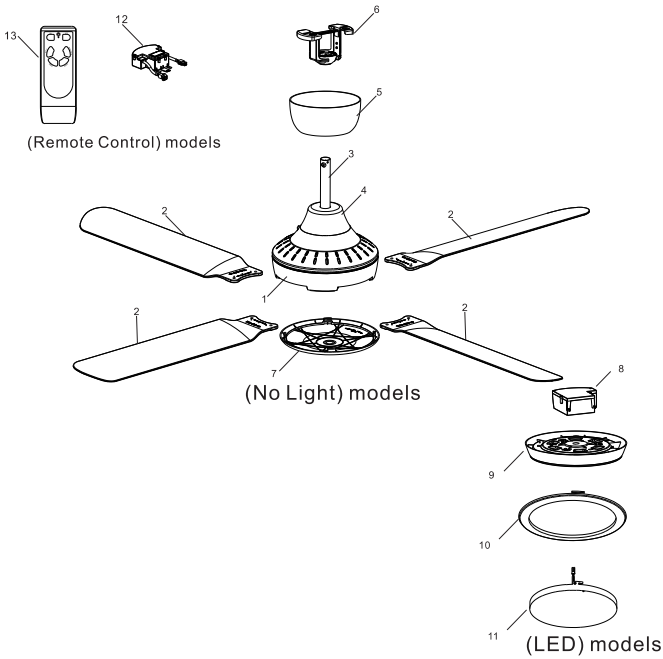

#	Part	Qty
01	Motor Assembly	1
02	Blades	3
03	Down Rod	1
04	Lower Canopy	1
05	Upper Canopy	1
06	Hang-Sure Set	1
07	Cover Disc	1
08	LED Light Driver	1
09	Light Frame	1
10	Decorative Ring	1
11	LED Light Panel	1
12	Remote Receiver	1
13	Remote Handpiece	1

INSTALLING MOUNTING BRACKET


1. Before installation, make sure that the blade tips will not be within 300mm of any object
2. Using the screws provided, secure the hanging bracket to a ceiling joist or suitable structure that is capable of supporting at least four times the actual weight of the fan (see Specifications)
   Note : For structures that are not Wooden , please use the appropriate fixing screws or bolts to suit.
3. Connect safety cable to bracket as indicated in fig 2.

Mounting Plate Hanging System

1. Ceiling Joist
2. Canopy
3. Terminal Block and Mounting Plate
4. Earth Wire
5. Hanger Ball
6. Down rod
7. Safety steel wire (to be fixed on the bracket via the screw)

*Please use the fixing screws provided. Use of non certified fixing screws may void the warranty.

FIG 2.

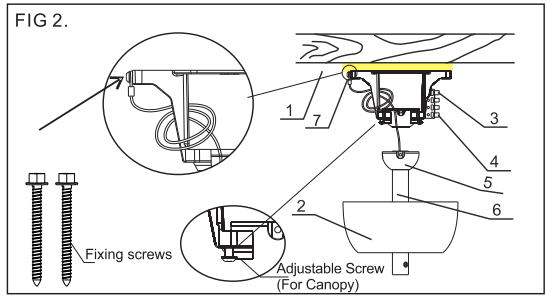



BLADE ASSEMBLY


1. Remove light diffuser (turning in a counter counterclockwise direction)


2. Attaching blades in hanging position


NOTE: 'THIS SIDE UP' text on the blades should be facing upwards once the fan is installed.

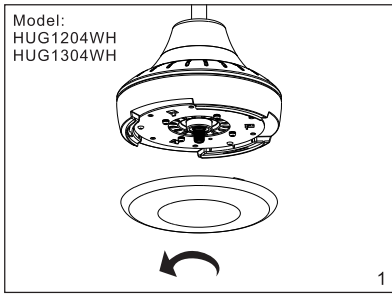


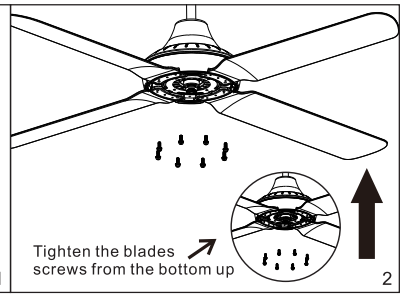

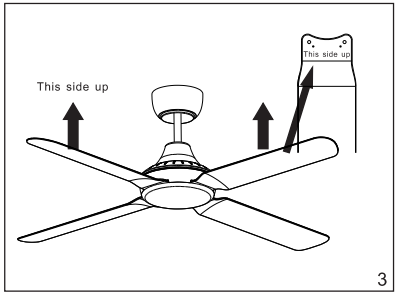


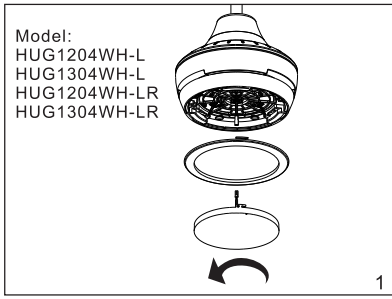

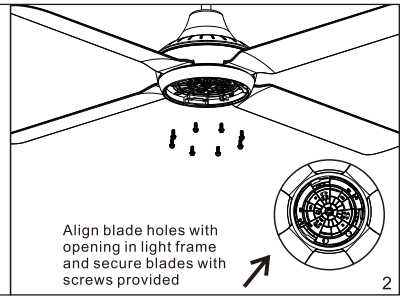

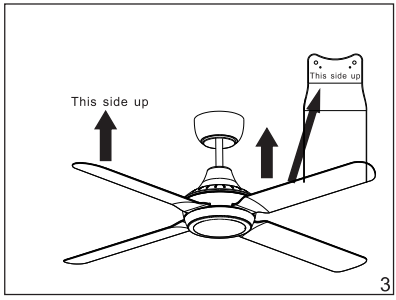

LIGHT KIT ASSEMBLY

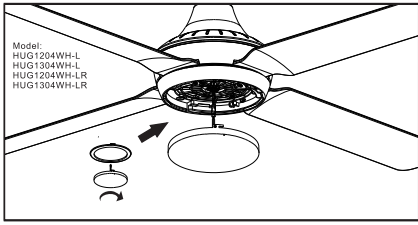


For (LED) models: After installing the fan blades, insert the light wire on the light frame into the terminal next to it, and then screw on the decorative ring and LED light panel.

WARNING:

For your safety, ensure the mains supply is switched off at the wiring circuit before performing any electrical tasks.

HOW TO CHANGE LED LIGHT COLOUR (DEFAULT COLOUR NATURAL WHITE)

The fan with light attached has three colour options available – Cool White, Natural White, and Warm White. The TRI colour control switch is on the light driver in the upper canopy. When pressed, the light will change colour. Pressing it again will change it again, cycling through all three options.

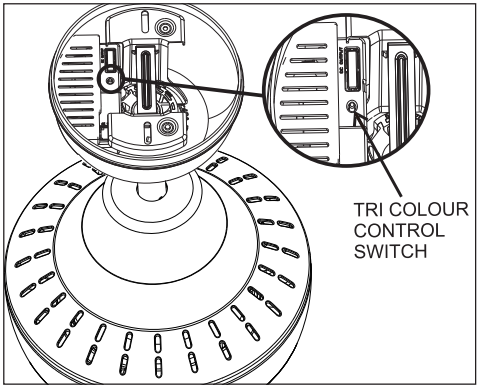


NOTE:

Please adjust the colour to your preference before installing the canopy.

STEP DIMMING INSTRUCTIONS


Using a Standard Wall Control



1. Flick switch to 'ON' – Light will be at 100%.
2. While 'ON', flick switch to 'OFF' then 'ON' again within 2 seconds – Light will be at 75%.
3. Continue same process to reach 50% and 25% light level.


NOTE: If the light switch is 'OFF' for more than 2 seconds, it will revert to 100% light setting when next operated.

Using Remote Control (Not Included)



1. Use Eco/Med/High buttons to alter the fan speed.
2. "OFF" button will turn the fan off only.
3. Turn Light "ON/OFF" for light.
4. Press the "STEP DIM" button to transition through 75%, 50%, 25% then back to 100% of light output.

WIRING DIAGRAM OF WALL CONTROL TERMINAL

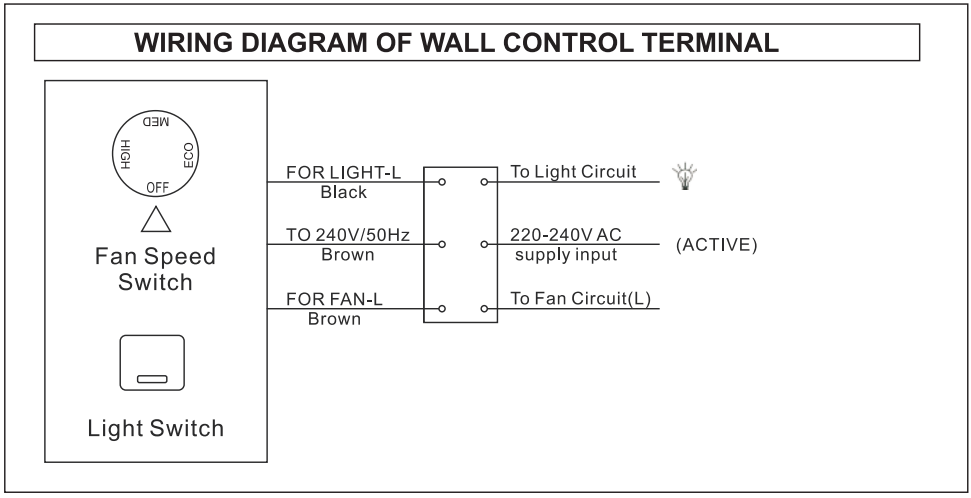


WARNING: FOR YOUR SAFETY, ENSURE THE MAINS SUPPLY IS SWITCHED OFF TO THE WIRING CIRCUIT BEFORE PERFORMING ANY ELECTRICAL TASKS.

HOW TO OPERATE

To turn the fan on, simply turn the switch knob to the (1, 2, 3) position.


To turn off, turn the switch knob to the OFF position.

WIRING DIAGRAM FOR MOUNTING BRACKET TERMINAL & WALL CONTROL

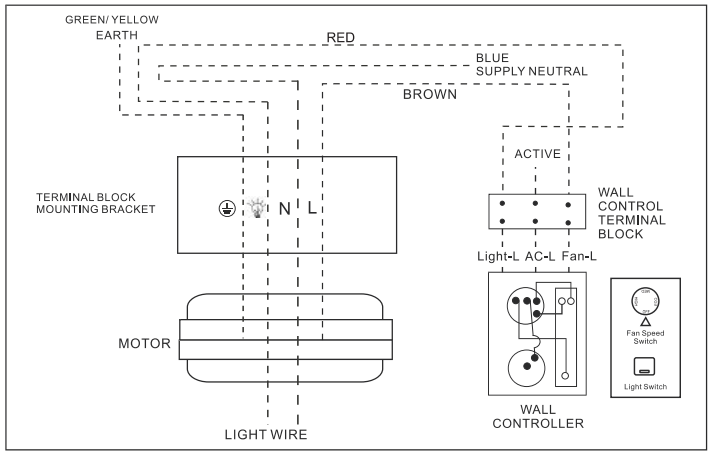

Step A: Connect the EARTH wire to the terminal port marked '⏚' on the terminal block mounting bracket.
Step B: Connect the supply LIVE wire to the wall controller terminal port labelled "TO 240V/50HZ".
Step C: Connect a wire from the Fan Live "L" from the terminal block mounting bracket, to the terminal port labelled "FOR FAN-L" on the wall controller.
Step D: Connect a wire from the Light Live " " from the terminal mounting bracket, to the terminal port labelled "FOR LIGHT-L" on the wall controller.
NOTE: The fan light wiring is only applicable to fan models with a light.
Step E: Connect the supply Neutral wire to the terminal port marked "N" on the terminal block mounting bracket.

WIRING DIAGRAM FOR ISOLATION SWITCH WITH REMOTE CONTROL

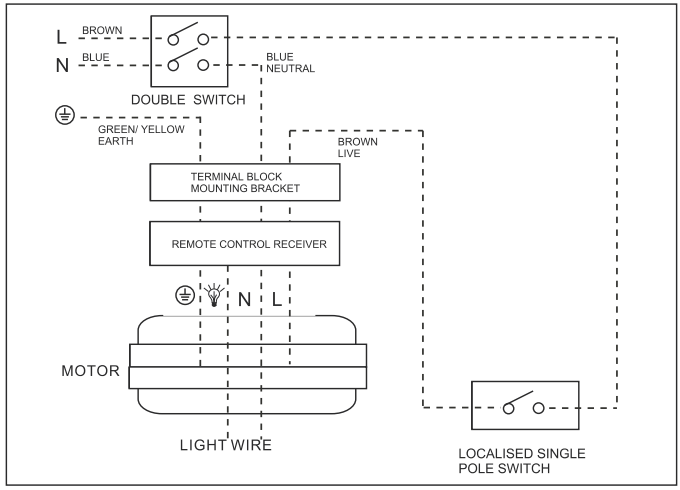

Step 1: Connect the EARTH wire to the terminal port marked "⏚" on the terminal block mounting bracket.

Step 2： Connect the supply LIVE wire to Localised single pole switch and then wire to terminal port marked "L" on the terminal block mounting bracket.

Step 3: Connect the supply Neutral wire to the terminal port marked "N" on the terminal block mounting bracket

Once all the above steps have been followed, you are now ready to restore the mains power supply. Make sure there is nobody near or under the fan, then turn ON the fan (and light switch if included in your model) to test.

INSTALLATION TIPS

The fixing point for the fan must be able to support the weight of 4 times that of the net weight of the fan. If you are mounting the fan to a ceiling junction box, the box and fixing must be able to support the moving weight of the fan and must not twist or work loose.

- All pole disconnection switches must be included in the fixed wiring.
- Only use the included wall control plate. Using other wall control plates will void warranty and may damage the fan.
- Do not use a solid state dimmer control.
- Do not use the light switch to control the fan motor.
- The wall control shall fit into existing gang block or wall plate. If you do not flush mount the control, use a standard single gang mounting block.
- Careful not to mix the supply live and the fan live connection. Reverse connection of the speed control will affect the correct operation of the fan.
- After the wiring connections are completed, ensure that all wires are arranged in a tidy manner, and make sure the ball sits well into the bracket, as it is important to reduce your fan from wobbling.

HANGING THE FAN

Hang the assembled fan into the Hanging Bracket making sure the groove on the hanging Ball, locates into the Tab of the Hanging Bracket. (Fig 3.)

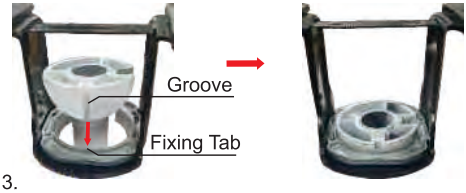


Fig 3.

FOR RAKED/SLOPED CEILINGS

1. Ensure the fixing tab fits in the groove of the hanger ball. (Fig 3.)
2. Ensure the fixing tab is set at the highest point. (Fig 5.)
3. Suitable for installations up to 18 Degrees of Pitch. (Fig 4.)

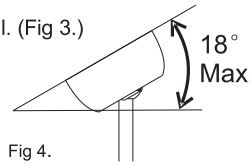


Fig 4.


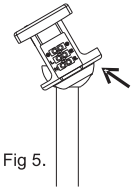


Fig 5.

INSTALLING REMOTE RECEIVER

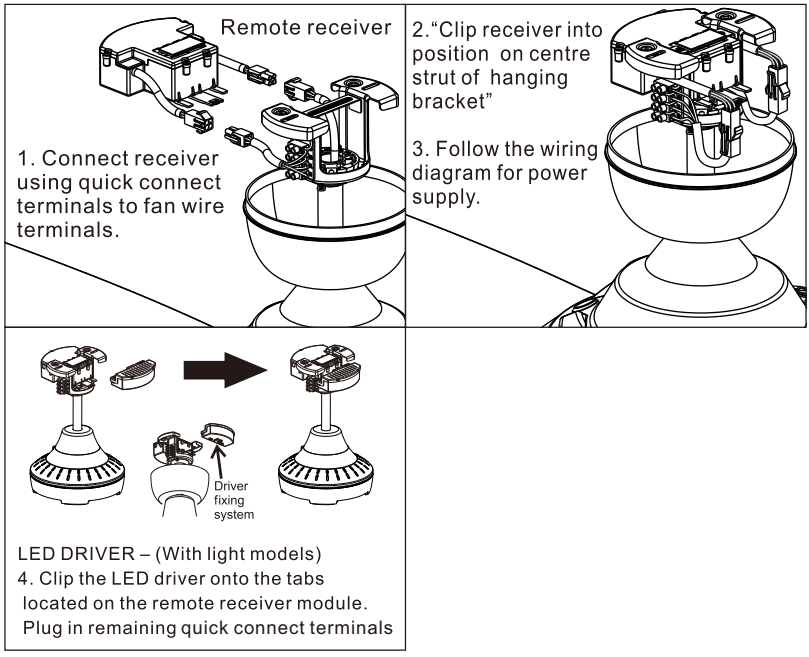

LED DRIVER – (With light models)
4. Clip the LED driver onto the tabs located on the remote receiver module. Plug in remaining quick connect terminals

The remote handpiece comes factory paired with the remote receiver, but if you wish to pair a remote handpiece to multiple fans, see below)

Step 1: Turn "OFF" isolation switch.

Step 2: Turn "ON" isolation switch and within 10 seconds, press LIGHT "ON" button for 3-4 seconds until a "Tick-Tack" sound is heard. (Repeat steps above if not successful).


MAINTENANCE AND TROUBLESHOOTING


- Keep the fan clean. Wipe away dirt with a clean soft cloth, ordinary soap and water, wipe dry. Do not use solvents, etc. (Gasoline or petroleum).
- Make sure to disconnect the power supply before cleaning and maintenance is carried out.
- Ensure that the fan is switched off from the supply mains before removing the guard.

The points described below should be checked, and corrected if necessary, upon installation and at least once a year thereafter.

Excessive movement and wobbling?

- Check all screws, bolts and nuts are secured tightly.
- Change position of the blades.
- Check blade height. Carefully rotate the fan and measure each blade from a fixed point on the ceiling. (Adjust if necessary, by loosening and re tightening the upper or lower blade screws).

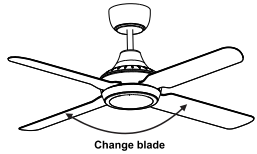

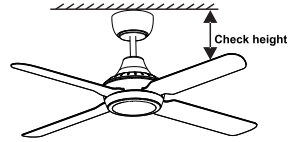

Does the motor, down rod or other components shake or vibrate abnormally?
Shaking and abnormal vibration can be caused if the blade holding screws or screws for the suspended parts are loose, or if a blade is deformed. If a blade is deformed, all 3 (or 4) blades should be replaced as a set.

Are there any unusual noises such as knocking or ticking?

1. Are the blade holding screws or screws for the suspended parts loose?

2. Make sure the bracing structure is sound and firm. Even slightly loose fixings may create knocking or ticking that will reverberate down through the fan. Upper canopy should not be in contact with the ceiling surface. It is suggested to leave an even 1mm to 4mm gap between ceiling and edge of upper canopy.

3. Unusual humming noises may be caused by electrical interference from another appliance, certain types of solar inverters or ripple control signals being introduced by your electricity provider. This is not a product defect.

WARNING:

If at any stage the fan develops excessive wobbling or unusual oscillating movement is observed, immediately stop using the ceiling fan and contact the manufacturer, its service agent or suitably qualified persons.

Fan Light:

Except for an actual fault in manufacturing, which is extremely rare, noises and vibrations are often more accentuated when a fan light is fitted. For instance, a fan light glass that has not been tightened or worked loose can cause a rattle. Frequent care and maintenance will reduce this.



Do not dispose of electrical products with household waste. Please check with your local council for advice on disposal or recycling. If electrical appliances are disposed of in landfills or dumps, hazardous substances can leak into the groundwater and get into the food chain, damaging your health and well-being.

MIDDY'S

DISTRIBUTED BY: VENTAIR PTY. LTD.
4 Capital Place, Carrum Downs VIC 3201